

HOW TO USE THE PRO DEEP CARPET CLEANER



1. Soap & Scrub Solution Button
2. Brush Jam Indicator Light
3. Solution Empty Indicator Light
4. Fold Handle Release Button
5. Easy Lift Tank Caddy Handle
6. Vacuum Hose Port
7. Dirty Water Tank
8. Lower Carry Handle
9. Solution Hose Port
10. Main Handle
11. Power Button (Carpet/Off/Tool)
12. Rotating Cord Wrap
13. Easy Measure Solution Pour Cap
14. Clean Water Tank
15. Easy Lift Caddy Locks
16. Brush Roll

How to Use: FILLING THE CLEAN WATER TANK

1

Locate the Clean Water Tank

The **Clean Water Tank** is the tank located on the back of the machine.

2

Access the Clean Water Tank

While Holding Caddy Handle, Firmly pull back **Main Handle** to release the handle into the cleaning position.

Push the **Clean Water Tank Release Button** and pull the tank in an outward motion to release tank.

3

Fill the Clean Water Tank

Unscrew the **Easy Measure Solution Pour Cap** from the **Clean Water Tank**.

Fill the **Clean Water Tank** with HOT tap water until it reaches the fill line.

4

Adding Rug Doctor Cleaning Solution

Follow the directions on the back of the Rug Doctor cleaning solution and fill the **Easy Measure Solution Pour Cap** with the recommended ounces of solution.

Clean Water Tank holds 1.5 gallons of water.

Tightly screw the **Easy Measure Solution Pour Cap** onto the tank.

5

Now You're Ready to Clean

Securely place the full **Clean Water Tank** back onto the machine. You will hear a "Click" sound when the tank has locked into place.

How to Use: CLEANING YOUR CARPETS

1

Plug in the Machine

Insert plug into a properly grounded outlet.

CAUTION
Check the Power Button to make sure the machine is in the "off" position.

2

Position the Machine

While Holding Caddy Handle, Firmly pull back **Main Handle** to release the handle into the cleaning position.

3

Turn on the Machine

Press the red **Power Button** located on the **Main Handle** to Carpet position.

4

Cleaning Your Carpets

Press the **Soap & Scrub Solution Button** to apply solution while making 2 slow wet passes (1 forward and 1 backward) over the same area. Release the **Soap & Scrub Button**.

Make 2 slow dry passes (1 forward and 1 backward) to suck up the dirty water (Do not hold down the **Soap & Scrub Solution Button** for this step).

How to Use: EMPTYING DIRTY WATER TANK

1

Locate the Dirty Water Tank

The **Dirty Water tank** is the tank located on the front of the machine.

2

Release the Dirty Water Tank

Push the **Dirty Water Tank Release Button** and pull the tank in an outward motion to release tank.

3

Remove Dirty Water

Unscrew the **Wide Opening Lid** on the back of the tank and pour out the dirty water.

Rinse out the **Dirty Water Tank** with warm water and screw lid back on tank. Securely place the **Dirty Water Tank** back onto the machine. You will hear a "Click" sound when the tank has locked into place.

NOTE: DO NOT pour dirty water into sink or tub. Dirty water should be poured into toilet or outside.

How to Use: INDICATOR LIGHTS

Removing Brush Roll Jam

Illuminated Indicator Light

The Brush Jam Indicator Light will illuminate if the machine detects a Brush Roll Jam.

Access the Brush Roll

Turn off the machine and unplug the machine from the power outlet. Remove water tanks. Gently position the machine on its back to access the Brush Roll.

Remove the Jam

Gently remove jammed item from the Brush Roll. Once jammed item is removed, place the machine upright, replace both tanks, plug in machine and press Power Button to Carpet mode to continue cleaning.

Refilling Cleaning Solution

Illuminated Indicator Light

The Solution Empty Indicator Light will illuminate if the machine detects the **Clean Water Tank** is empty.

See FILLING THE CLEAN WATER TANK SECTION.

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USING THIS MACHINE

When using an electrical appliance, basic precautions should always be followed to avoid personal injury and the risk of permanent damage to your property. Please follow all warnings below, on the Rental Contract and www.rugdoctor.com

WARNING TO REDUCE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Use the machine only as described in this manual. Use only manufacturers recommended attachments.
- For indoor use only.
- DO NOT** leave machine unattended when plugged in or while it is powered on. Unplug the machine when not in use and before cleaning or servicing.
- Use only Rug Doctor® cleaning products intended for use with this machine.
- DO NOT** immerse. Use only on surfaces moistened by the cleaning process.
- DO NOT** use machine as a vacuum.
- This machine is designed to clean normally soiled carpets in two (2) cleaning passes, except Berber multi-level or looped carpets.
- DO NOT** use more than four (4) cleaning passes on any area of carpet as overwetting and damage may result which could include permanent staining of carpet.
- Use caution when using hot tap water. Do not boil or microwave water to be used in this machine.
- DO NOT** allow the machine to run dry. When the solution tank runs out, stop using and follow directions to refill.
- DO NOT** allow this machine to be used as a toy. Close attention and adult supervision is necessary when used by or near children. This machine is not intended to be used by children age 12 and under.
- DO NOT** allow children to place their body parts in or near openings or moving parts.
- DO NOT** use with damaged cord or plug. If this machine is not working as it should, has been damaged by dropping or has been left outdoors; stop using and return to store.
- DO NOT** pull by the cord, carry by the cord, use the cord as a handle, close a door on the cord, nor pull the cord around sharp edges or corners.
- DO NOT** run machine over the cord. Keep cord away from heated surfaces.
- DO NOT** unplug by pulling on the cord. Unplug by pulling on the plug.
- DO NOT** handle the plug or use this machine with wet or sweaty hands.
- DO NOT** put any objects into opening. **DO NOT** use the machine if any opening is blocked. Keep openings free of dust, lint, hair and anything that could reduce air flow.
- Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- DO NOT** use to pick up flammable or combustible materials or liquids such as gasoline, or certain paints. **DO NOT** use in areas where they may be present.
- DO NOT** use to pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- DO NOT** place in or pick up anything with this machine that is a caustic or toxic material, such as bleach, ammonia, toilet bowl cleaners or drain cleaners.
- DO NOT** clean over floor electrical outlets.
- The use of an extension cord is not recommended. Failure to follow this instruction may expose the user to the possibility of electric shock, personal loss or injury and/or death.
- DO NOT** operate without tanks or in any manner inconsistent with the above warnings or the operating instructions with the machine.
- Always turn off this machine before connecting or disconnecting either hose, wands or motorized nozzle.
- The attachments hose contains electric wires. **DO NOT** use or repair a damaged hose. **DO NOT** use when the hose is cut or punctured. Avoid picking up sharp objects.
- The attachments hose is to be examined periodically for visible deterioration, such as abrasions, cracks, splits and the like.
- The attachments hose is to be used only for indoor household cleaning applications using only manufacturer's recommended cleaning solutions.
- Always ensure float is properly installed before any wet pick-up operation.
- Machine and attachments contain chemicals known to the state of California to cause cancer, birth defects and other reproductive harm.
- Connect to a properly grounded outlet only. See "Grounding Instructions."


For household use only

GROUNDING INSTRUCTIONS

This appliance must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord that has an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING

Improper connection of equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is for use on a nominal 120-volt circuit and has a grounded plug that looks like the plug illustrated here. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adapter should be used with this appliance.

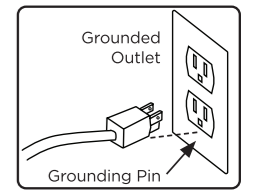

HOW TO USE THE MOTORIZED UPHOLSTERY TOOL



How to Use: FILLING THE CLEAN WATER TANK

1

Locate the Clean Water Tank

The **Clean Water Tank** is the tank located on the back of the machine.



2

Access the Clean Water Tank

While Holding Caddy Handle, Firmly pull back **Main Handle** to release the handle into the cleaning position.




3

Fill the Clean Water Tank

Unscrew the **Easy Measure Solution Pour Cap** from the **Clean Water Tank**.

Fill the **Clean Water Tank** with HOT tap water until it reaches the fill line.

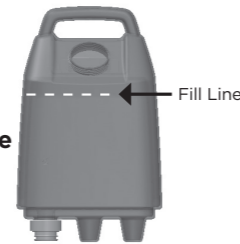

4

Adding Rug Doctor Cleaning Solution

Follow the directions on the back of the Rug Doctor cleaning solution and fill the **Easy Measure Solution Pour Cap** with the recommended ounces of solution.

Clean Water Tank holds 1.5 gallons of water.


Tightly screw the **Easy Measure Solution Pour Cap** onto the tank.



5

Now You're Ready to Clean

Securely place the full **Clean Water Tank** back onto the machine. You will hear a "Click" sound when the tank has locked into place.

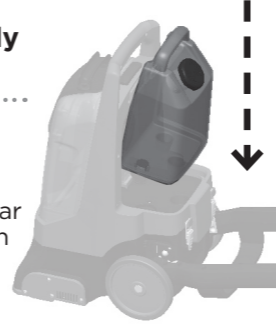

How to Use: CONNECT TOOL TO MACHINE

1

Attaching Tool to Machine


Open the Vacuum Hose Port. Pull the black rubber flap upward to open the Vacuum Hose Port.



2

Connect the Vacuum Hose


Insert the Vacuum Hose Cuff into the Vacuum Hose Port (marked "A").

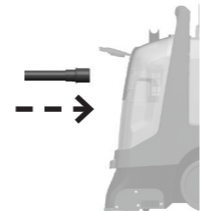

3

Connect the Solution Hose

Insert the Solution Hose into the Solution Hose Port (marked "B").

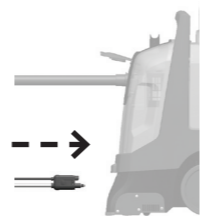

4

Attach Upholstery Tool to Handle

Once separate from the machine, connect the Motorized Upholstery Tool & Tool Handle (as pictured below). Press the two pieces together firmly to assure a tight connection.



5

Plug in the Machine

Insert plug into a properly grounded outlet.

CAUTION
Check the Power Button to make sure the machine is in the "off" position.




How to Use: CLEANING YOUR UPHOLSTERY

1

Turn on the Machine

Press the red **Power Button** located on the **Main Handle** to Carpet position.

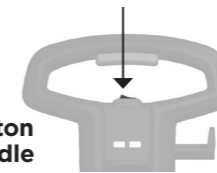

2


Position the Upholstery Tool

Position the Upholstery Tool in front of the area or stain you want to deep clean.

For optimal cleaning, position the head at a slight angle to ensure the front nozzle is touching the surface.

Pull backwards SLOWLY to clean.

As the Upholstery Tool is motorized, slower action allows for deep/better cleaning.

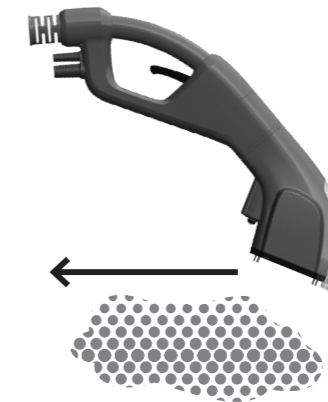


3

Cleaning Your Upholstery

Squeeze and hold the Cleaning Solution Trigger to begin cleaning. Pull the tool backward slowly over the stain, releasing the Cleaning Solution Trigger when complete.

Move the tool back and forth over the area you want to deep clean. For tough stains, consider applying more solution to saturate the material. Take it slow! Slower action allows the motorized brush and power suction to clean deeper.

Excess solution can be removed by making additional passes with the tool without squeezing the Cleaning Solution Trigger.

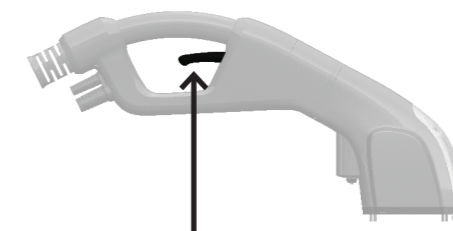

4

After Cleaning

Keep the machine in "Tool" mode 15 seconds after cleaning, to allow for all of the dirty solution to be collected into the dirty water tank.



Prepare Machine to return to store: CLEAN MACHINE

1

To avoid Cleaning Fee follow these steps

1. Unplug machine.
2. Remove and empty the **DIRTY WATER TANK**. Rinse and let dry. **CLEAN WATER TANK**
3. Remove hair and debris from bottom of machine and brush roll.
4. Wipe down bottom.
5. Put **DIRTY WATER TANK** back onto machine and return machine to the store.
6. If you rented and used the upholstery tool, rinse the tool head, remove dirt and debris and wipe it down.

Note: Do NOT spray machine with hose or immerse in water at any time