 
 


HOW TO USE THE PRO PORTABLE SPOT CLEANER AND DETAILER

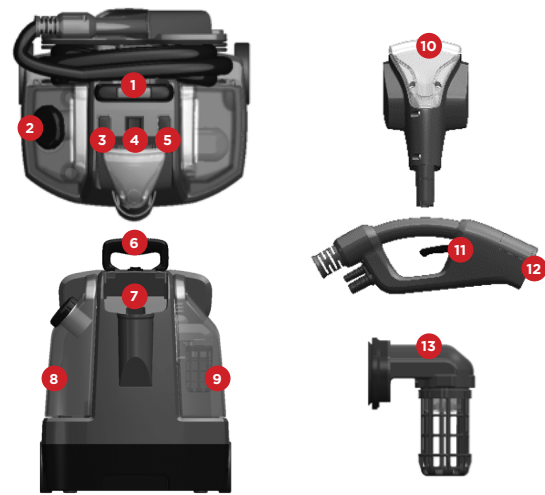

1. Handle Extension Release Button
2. Easy Measure Solution Pour Cap
3. Clean Water Tank Release Button
4. Power Button
5. Dirty Water Tank Release Button
6. Extending Carry Handle
7. Motorized Upholstery Head Pocket
8. Clean Water Tank
9. Dirty Water Tank
10. Motorized Upholstery Tool
11. Cleaning Solution Trigger
12. Tool Handle
13. Dirty Water Tank Float

How to Use: FILLING THE CLEAN WATER TANK

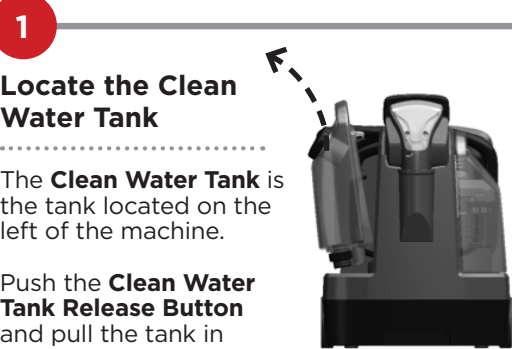

1 Locate the Clean Water Tank

The **Clean Water Tank** is the tank located on the left of the machine.

Push the **Clean Water Tank Release Button** and pull the tank in an outward motion to release tank.



2 Fill the Clean Water Tank

Unscrew the **Easy Measure Solution Pour Cap** from the **Clean Water Tank**.

 
Fill the **Clean Water Tank** with HOT tap water until it reaches the fill line.

3

Adding Rug Doctor Cleaning Solution

Follow the directions on the back of the Rug Doctor cleaning solution and fill the **Easy Measure Solution Pour Cap** with the recommended ounces of solution. **Clean Water Tank** holds .75 gallons of water.

Tightly screw the **Easy Measure Solution Pour Cap** onto the tank. Securely place the full **Clean Water Tank** back onto the machine. You will hear a "Click" sound when the tank has locked into place.

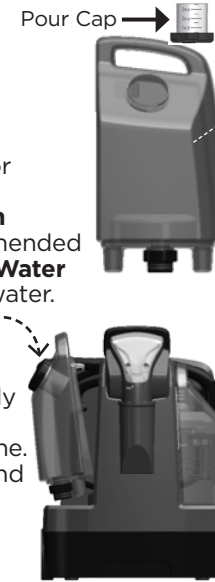

How to Use: CLEANING CARPET & UPHOLSTERY

1

1 Remove Tool and Handle


The **Motorized Upholstery Tool** is easily lifted from the machine front while the **Tool Handle** is easily slid out from the Tool Handle Holster on the back. Unwrap the Hose from the Tool Hose Wrap on the back of the machine.



2

2 Attach Upholstery Tool to Handle

 Once separate from the machine, connect the **Motorized Upholstery Tool & Tool Handle** (as pictured above).



3

3 Plug in the Machine

Insert plug into a properly grounded outlet.

CAUTION
Check the Power Button to make sure the machine is in the "off" position.

Insert plug into a properly grounded outlet.



4

Cleaning Your Carpets & Upholstery

Turn on the machine.

To start cleaning, squeeze and hold the **Cleaning Solution Trigger** while slowly moving the tool back and forth over the stain, releasing the **Cleaning Solution Trigger** when complete.

Excess solution can be removed by making additional passes with the tool without squeezing the **Cleaning Solution Trigger**. This may permit faster drying.



How to Use: EMPTYING DIRTY WATER TANK

1

1 Locate the Dirty Water Tank

The **Dirty Water tank** is the tank located on the right of the machine.



2

2 Release the Dirty Water Tank

Push the **Dirty Water Tank Release Button** and pull the tank in an outward motion to release tank.



3

3 Remove Dirty Water

Unscrew the Wide Opening Lid on the back of the tank, remove the **Dirty Water Tank Float** and pour out the dirty water.



Rinse out the **Dirty Water Tank** with warm water and screw lid back on tank. Securely place the **Dirty Water Tank** back onto the machine. You will hear a "Click" sound when the tank has locked into place.

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USING THIS MACHINE

 
When using an electrical appliance, basic precautions should always be followed to avoid personal injury and the risk of permanent damage to your property. Please follow all warnings below, on the Rental Contract and www.rugdoctor.com

WARNING
TO REDUCE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- > Use the machine only as described in this manual. Use only Rug Doctor's recommended attachments and cleaning solutions.
- > For indoor use only.
- > **DO NOT** leave machine unattended when plugged in or while powered on. Turn off all controls before unplugging. Unplug the machine when not in use and before cleaning or servicing. **DO NOT** unplug by pulling on the cord. Unplug by pulling on the plug.
- > Use only Rug Doctor® cleaning products intended for use with this machine.
- > **DO NOT** immerse. Only use machine on surfaces moistened by the cleaning process.
- > Use caution when using hot tap water. **DO NOT** boil or microwave water to be used in this machine.
- > **DO NOT** allow the machine to run dry. When the Clean Water Tank runs out, stop using and follow directions to refill.
- > **DO NOT** allow this machine to be used as a toy. Close attention and adult supervision is necessary when used by or near children. This machine is not intended to be used by children age 12 and under. **DO NOT** allow children to place their body parts in or near openings or moving parts.
- > **DO NOT** use with damaged cord or plug. If this machine is not working as it should, has been damaged by dropping or has been left outdoors; stop using and take it to a service center.
- > **DO NOT** pull by cord, carry by cord, use cord as a handle, close a door on cord, nor pull cord around sharp edges or corners.
- > **DO NOT** run machine over cord. Keep cord away from heated surfaces.
- > **DO NOT** clean over floor electrical outlets.
- > **DO NOT** handle plug or use this machine with wet or sweaty hands.
- > **DO NOT** put any objects into opening. **DO NOT** use machine if any opening is blocked. Keep openings free of dust, lint, hair and anything that could reduce air flow. Use extra care when cleaning on stairs.
- > Keep hair, loose clothing, fingers and all body parts away from openings and moving parts.
- > Turn off all controls before unplugging.
- > **DO NOT** use to pick up flammable or combustible materials such as gasoline; or paints. **DO NOT** use in areas where these may be present.
- > **DO NOT** use to pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- > **DO NOT** place in or pick up anything with this machine that is a caustic or toxic material, such as bleach, ammonia, toilet bowl cleaners or drain cleaners.
- > The use of an extension cord is not recommended. Failure to follow this instruction may expose the user to the possibility of electric shock, personal loss or injury and/or death.
- > **DO NOT** operate without tanks or in any manner inconsistent with the above warnings or the operating instructions included with the machine.
- > Always turn off this machine before connecting or disconnecting hoses, wands or motorized nozzle.
- > The attachments hose contains electric wires. **DO NOT** use or repair a damaged hose. **DO NOT** use when the hose is cut or punctured. Avoid picking up sharp objects.
- > Examine the attachment hose periodically for visible deterioration, such as abrasions, cracks, splits and the like.
- > The attachment hose is to be used only for indoor household cleaning.
- > **DO NOT** use this machine as a vacuum.
- > Always ensure float is properly installed before any wet pick-up operation.
- > Machine and attachments contain chemicals known to the state of California to cause cancer, birth defects, and other reproductive harm.
- > Connect to a properly grounded outlet only. See "Grounding Instructions."

GROUNDING INSTRUCTIONS

This appliance must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord that has an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

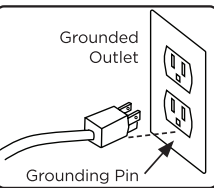

WARNING

Improper connection of equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is for use on a nominal 120-volt circuit and has a grounded plug that looks like the plug illustrated here. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adapter should be used with this appliance.