



HOW TO USE THE PRESSURE WASHER



Surface Cleaner rents separately

1. Handle
2. Handle locking pin
3. Detergent tank cap
4. Crank handle
5. High pressure hose
6. Water inlet
7. Carrying handle
8. On/off switch
9. Power cord
10. Universal nozzle
11. Quick connect wand
12. Spray gun trigger handle



How to Use: MACHINE SET UP

Read all operating instructions carefully before using. Remove all obstructions from cleaning area that can be tripped over. Ensure all doors/windows are closed tightly. Only use clean cold water with the machine. Garden hose must be at least 1/2 inch in diameter to ensure proper water supply.

1

Turn machine OFF. Pull out cord, plug into electrical outlet. DO NOT USE EXTENSION CORD.

Attach your water hose to front of machine

Connect the WAND & TRIGGER HANDLE by inserting together and hand tighten.

2

Pull out High Pressure Hose

Connect assembled TRIGGER with WAND to HIGH PRESSURE HOSE and hand tighten until two parts are fully secured. Turn on water at source, depress TRIGGER for 30 secs to purge.



How to Use: CLEANING WITHOUT DETERGENT

1

Adjust Universal nozzle



Turn the body of nozzle counter-clockwise towards the negative (-) position for a tight spray pattern. Turn body towards the positive (+) position for a wide spray pattern. When testing spray nozzle adjustment, keep 4 feet from surfaces. Always engage TRIGGER LOCK on handle and turn machine OFF before adjusting nozzle.

2

Turn Machine ON (green button)



Machine will build up pressure for a few seconds and the machine will stop once desired water pressure is achieved. Holding WAND and TRIGGER HANDLE with both hands, squeeze spray gun trigger until there is a steady stream of water. Keep clear of nozzle. Never direct high pressure spray at any person, animal or self.

How to Use: CLEANING WITH DETERGENT

Only use cleaning detergents designed for pressure washers. For best results, use Rug Doctor Outdoor Cleaner. Always spray detergent on dry surface. Test in a small, hidden area before use.

1

Mix Cleaning Detergent

Mix cleaning detergent per the detergent label instructions. Follow detergent label instructions for use.

Remove the detergent tank cap, fill tank with detergent solution and replace the cap.



2

Apply Cleaning Detergents



To apply detergents, you must operate at low pressure setting. Push universal nozzle tip out to the "SOAP" position. Machine will not apply detergent in the "CLEAN" position. Always engage TRIGGER LOCK on handle and turn machine OFF before adjusting nozzle.

3

Turn Machine ON (green button)



Depress trigger to operate unit. The liquid detergent will automatically mix with water, and be discharged through the nozzle. Apply detergent to a DRY work surface, from bottom to top.

Allow detergent to remain on the surface for a short time before rinsing. Do not allow detergent to dry on surface.

To rinse with clean water, pull universal nozzle back into the "CLEAN" position. On a vertical surface, rinse from the bottom up, then rinse from the top down to avoid streaking. Hold nozzle at a safe distance from the cleaning surface.

How to Use: SURFACE CLEANER ATTACHMENT

1


Turn The Water Source Off




Ensure pressure washer is OFF & squeeze spray gun TRIGGER to release high pressure water. Disconnect spray WAND from TRIGGER HANDLE.

2

Set Up Tool

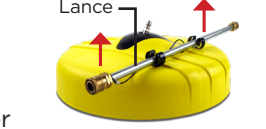

Remove surface cleaner LANCE from clips. Pull back COUPLER and insert LANCE into Surface Cleaner until you hear "click" then release COUPLER.

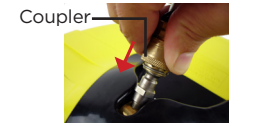

3

Connect Wand and Surface Cleaner



Connect assembled Surface Cleaner LANCE to TRIGGER HANDLE by inserting together & hand tighten until secure.

4

Start Cleaning Surfaces



Place Surface Cleaner on surface to be cleaned. Turn pressure washer ON & squeeze spray gun TRIGGER.

Walk slowly behind Surface Cleaner & pull backwards to clean. If striping or swirling occurs, slow your pace.

How to Clean Up: PREPARATION FOR RETURN

1

Turn Machine off and unplug electric cord



Empty detergent tank completely by lifting and leaning machine over and upside down to drain.

LIFT, LEAN & TURN OVER TO DRAIN

Fill detergent tank 1/4 full with clean water. Plug in electric cord. Spray wand using "SOAP" nozzle setting until detergent tank is empty.

Turn machine OFF. Unplug electric cord and use hand crank on cord reel to wrap up power cord.

Turn water off at the source. Disconnect water hose from machine.

2

Disconnect Tools & Clean Machine



Disconnect WAND and TRIGGER HANDLE and stow in machine compartment. Use hand crank on hose reel to wrap up high pressure hose. Collapse hand crank handles. Use mild soap and damp cloth to clean the main body of machine. Raise handle to roll machine to desired location. Only use carrying handle to lift machine.

FOR SURFACE CLEANER:

With Surface Cleaner still on ground, squeeze spray gun TRIGGER to release high pressure water. Disconnect surface cleaner LANCE from TRIGGER HANDLE & Surface Cleaner. Secure Surface Cleaner LANCE in clips. Remove and wash debris from under Surface Cleaner & use a dry cloth to wipe down shroud.

Troubleshooting: MACHINE FUNCTION

ISSUE	RESOLUTION
Machine will not turn on	Check GFCI on machine power cord. Press reset button until red indicator light appears.
Soap will not dispense	Check nozzle setting to make sure it is in the SOAP position. Soap will not dispense in the CLEAN position.
Water will not spray	Make sure your outdoor water faucet valve is fully on. Check water inlet filter screen for debris and rinse clean if necessary.
Machine does not have high pressure	Check nozzle setting to make sure it is in the CLEAN position.

Need Help? Please call 1-800-784-3628

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USING THIS MACHINE

All instructions and warnings contained in the Rental Contract and on Ruggedoctor.com regarding Rug Doctor's rental program are incorporated herein by reference. Before operating machine (including any attachments), renter agrees to fully read, understand, and follow all safety warnings and instructions set forth below and in the operator's manual, which can be found on Rug Doctor's website (www.rugdoctor.com). Machine may contain water. When using machine (including any attachments), basic precautions should always be followed, including the following:

WARNING This product can expose you to chemicals including Di(2-ethylhexyl)phthalate (DEHP), which is known to the State of California to cause birth defects or other reproductive harm, and lead, which is known to the State of California to cause cancer, birth defects, and other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

WARNING
TO REDUCE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

GENERAL SAFETY AND OPERATION RULES FOR ALL EQUIPMENT

- Read all instructions on the Rental Contract, on equipment, and in the Operator's Manual before using equipment.
- Use only as described on the Rental Contract, on equipment, and in the applicable Operator's Manual and only with the manufacturer's recommended attachments or components.
- Connect machine to a properly grounded outlet only. See applicable Operator's Manual and "Grounding Instructions" below.
- Never operate equipment without all components properly connected to machine. It is Renter's responsibility to thoroughly inspect and examine all equipment before leaving the store and before use. If abrasions, cracks, splits, or the like exist, do not use equipment and immediately return to store and notify Rug Doctor at (800) 784-3628.
- Before using equipment, understand how to turn machine on and off and be thoroughly familiar with equipment controls and how to operate them. Equipment must NOT be used indoors.
- Stay alert - watch what you are doing.
- Do not operate equipment when fatigued or under the influence of alcohol or drugs.
- Do not allow to be used as a toy. Do not operate equipment near children. Never allow children to operate equipment.
- Keep operating area clear of all debris, people and pets.
- Do not stand on unstable surfaces. Do not overreach or stand on unstable support. Keep good footing and balance at all times.
- Power connections and plug should be kept dry and off the ground. Do not run equipment over electrical outlets that may be located on the floor.
- Do not touch plug or operate equipment with wet or sweaty hands. Wear safety goggles and hard toe shoes with rubber soles when operating equipment.
- Do not submerge equipment, expose to rain, or place equipment in standing water.
- Do not leave equipment when it is plugged in or while it is powered on. Unplug from the outlet when not in use and before cleaning.
- Always turn off machine before connecting or disconnecting any applicable attachment.
- Always move switch on machine to off position before connecting or disconnecting cord to electrical outlets.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run machine over cord. Keep cord away from heated surfaces.
- Do not use an extension cord. Failure to follow this instruction may expose Renter to the possibility of electric shock, personal loss or injury and/or death.
- Do not use bleach, dye, laundry detergents, cleaning products, harsh solvents or chemicals, or any non-Rug Doctor products with equipment as permanent damage to your property may result.
- Do not use, spray, place or pick up flammable or corrosive liquids, acids and solvents in equipment or use equipment in an area where combustible dust, liquids, or vapors are present. Do not place in or pick up anything with equipment that is a caustic or toxic material, such as bleach, ammonia, toilet bowl cleaners, or drain cleaners. An electric spark could cause an explosion resulting in serious personal injury or even death.
- Never cover machine during operation, machine needs to allow free air cooling. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts. Do not put any objects into openings or use with opening blocked. Keep openings free of dust, lint, hair, and anything else that could reduce the flow of air.

PRESSURE WASHER SPECIFIC SAFETY AND OPERATION RULES

- Operate equipment ONLY outdoors.
- Before using equipment, learn how to stop and release pressure quickly.
- Make sure safety lock is engaged prior to turning machine on and pressurizing. Always lock the trigger of the trigger handle in the safety position when not in use.
- Make sure safety lock is reengaged when cleaning is complete. The safety feature DOES NOT lock trigger in the on position.
- Keep clear of nozzle. High pressure jets can be dangerous if missed. The jet and spray wand must not be directed at windows, persons (including yourself), animals, electrical devices and wiring, or equipment itself.
- Equipment can cause serious injury if the spray penetrates the skin. In case of penetration, seek medical aid immediately.
- Risk of eye injury. Spray can splash back or propel objects. Always wear safety glasses or goggles when using or in vicinity of this equipment.
- Keep equipment as far as possible from area to be cleaned to minimize contact with water.
- Hold spray wand, trigger handle, and nozzle firmly with both hands when starting and operating equipment to reduce risk of impact injury from kick-back following pressurization.
- Never put hands or fingers over the spray nozzle or spray tip while operating equipment. Do not move spray tip while spray trigger is depressed.
- Never disconnect the high pressure hose from machine while the system is pressurized. To release pressure from machine, turn power and water supply off, then depress trigger 2-3 times. Discharge residual pressure by depressing the trigger until no more water comes out of the nozzle.
- Do not run pump dry. Always turn the water supply on before turning the power to machine on. Running pump dry causes serious damage.
- Use only Rug Doctor Outdoor Cleaner Concentrate. Always follow manufacturer's label recommendations for proper use of solutions. Always protect eyes, skin and respiratory system from solution if used.
- Do not use pressure that exceeds the operating pressure of any of the parts (hoses, fittings, etc.) in the pressurized system. Never use with any other manufacturer's accessories or components.
- Do not operate machine with the inlet water filter removed. Keep filter clear of debris and sediment.
- To minimize the amount of water getting into machine, machine should be placed as far as possible from the cleaning site during operation.
- Always rinse the cleaning area after applying cleaning solution. If cleaning solution is allowed to dry on painted surface, damage may result.
- Do not submerge or try to clear flooded areas with equipment.
- Do not use or place equipment on or near wood, laminate, or natural fiber floors. Do not use or place equipment on upholstery, carpet, or rugs.
- Only use cold water in connection with the operation of equipment and make sure equipment is connected to a water hose at least one-half inch in diameter.

SURFACE CLEANER SPECIFIC SAFETY AND OPERATION RULES

- Never allow rotating parts to strike any object, person, or pet.
- To reduce the risk of injection or injury, only use the surface cleaner on flat, horizontal surfaces. Never lift the surface cleaner from the cleaning surface while operating the pressure washer.
- DO NOT put hands, feet, or any other body part under the surface cleaner shroud when surface cleaner is connected to the spray gun - rotating parts can cause serious damages and/or injuries.
- Do not use the surface cleaner on raised objects. Striking any raised object while using the surface cleaner will cause damage.
- Do not allow surface cleaner to remain stationary on soft surfaces, such as wood.
- To reduce the risk of property damage or injury, spray the pressure stream in a safe direction to ensure proper connection of all accessories and attachments before starting any cleaning project.
- Rug Doctor is not liable for damages caused by wrong installation.
- Do not allow unit to run when not in use.
- For use with Rug Doctor pressure washer ONLY.

GROUNDING INSTRUCTIONS

This machine must be grounded. If it should malfunction or Break Ground, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This machine is equipped with a cord having equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the machine. Do not use it if the plug does not fit the outlet. Machine is for use on a nominal 120-volt circuit and has a grounded plug as illustrated here. Make sure the machine is connected to an outlet having the same configuration as the plug. Do not use an adapter or extension cord.

