


RugDoctor®

HOW TO USE THE MIGHTY PRO X3 CARPET CLEANER




1. Press For Spray
2. Tool / 0 /carpet "0" is off position reset button is located below
3. Hood latch & dome hood
4. Dirty Water Tank
5. Handle Release
6. Dome Filter
7. Clean Water Tank

How to Use: FILLING THE CLEAN WATER TANK

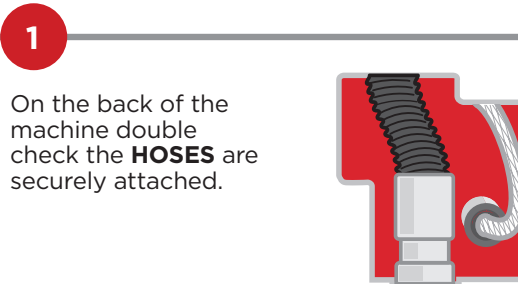


1 On the back of the machine double check the **HOSES** are securely attached.

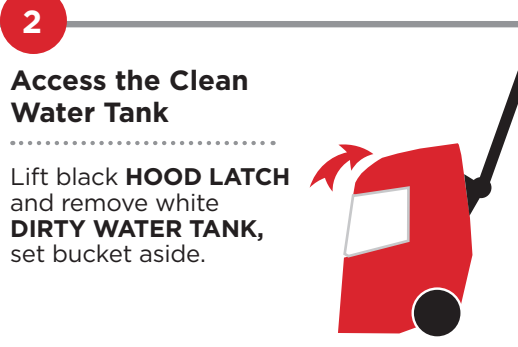

2 **Access the Clean Water Tank**

Lift black **HOOD LATCH** and remove white **DIRTY WATER TANK**, set bucket aside.

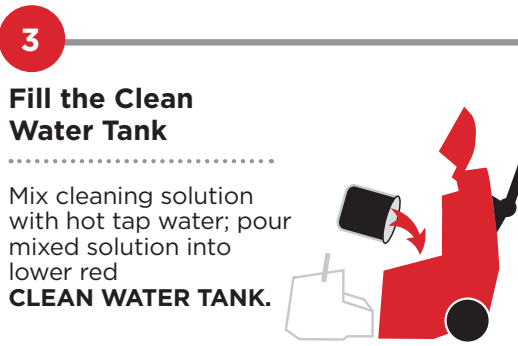

3 **Fill the Clean Water Tank**


Mix cleaning solution with hot tap water; pour mixed solution into lower red **CLEAN WATER TANK**.



4 **Now You're Ready to Clean**



Replace the white **DIRTY WATER BUCKET** and close red **HOOD**.

How to Use: CLEANING YOUR CARPETS

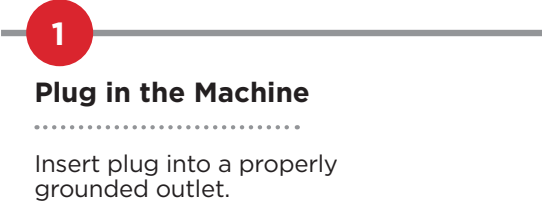

1 **Plug in the Machine**

Insert plug into a properly grounded outlet.

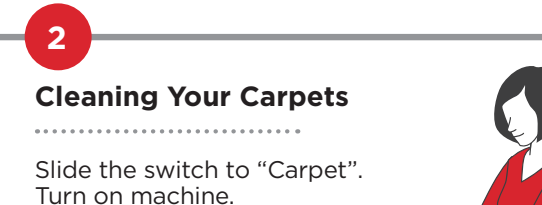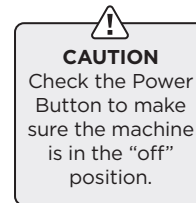

2 **Cleaning Your Carpets**


Slide the switch to "Carpet". Turn on machine.

To clean, press and hold red **SPRAY** button while slowly pulling backwards

Press and release red button before ending each cleaning pass.

Tilt back to move forward, overlap cleaning passes 2-3 inches.

How to Use: EMPTYING DIRTY WATER TANK

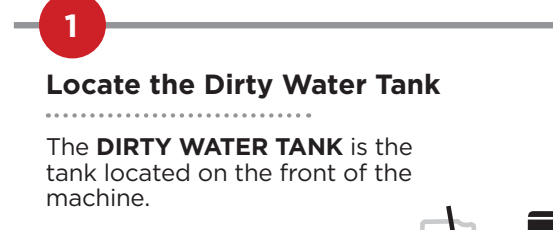


1 **Locate the Dirty Water Tank**

The **DIRTY WATER TANK** is the tank located on the front of the machine.

When pump sound increases, **CLEAN WATER TANK** is empty. Unplug machine and remove white **DIRTY WATER TANK** to empty. Refill **CLEAN WATER TANK**.





How to Use: UPHOLSTERY TOOL

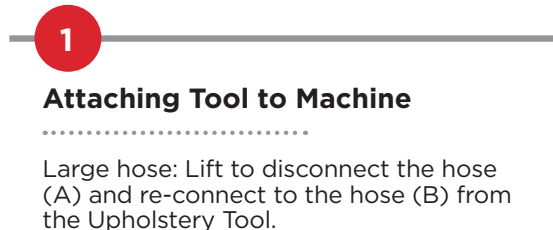

1 **Attaching Tool to Machine**


Large hose: Lift to disconnect the hose (A) and re-connect to the hose (B) from the Upholstery Tool.

Small hose: Push the textured metal ring (C) in while pulling the hose (D) out, insert tube from the Upholstery Tool (E)

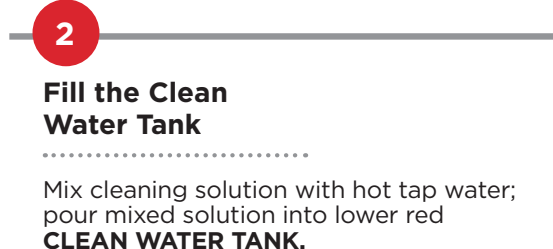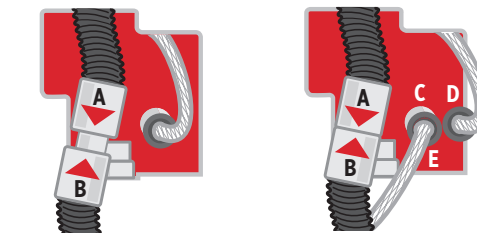

2 **Fill the Clean Water Tank**

Mix cleaning solution with hot tap water; pour mixed solution into lower red **CLEAN WATER TANK**.

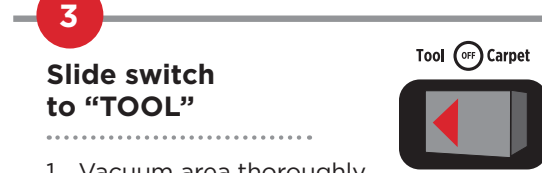

3 **Slide switch to "TOOL"**

1. Vacuum area thoroughly.

2. Attach tool to the machine.

3. Prepare the machine - fill tank and formula as per previous directions.

4. Turn on the machine by pressing the "ON" switch for **UPHOLSTERY/HAND TOOL** cleaning on the top of the machine.

5. Test upholstery for colorfastness by first cleaning a small, hidden area, then rubbing the test area with a white paper towel. If no color appears, continue cleaning.

6. Clean by squeezing the hand tool lever as you pull the tool backwards over area to extract dirty water.



Prepare Machine to return to store: CLEAN MACHINE

1 **To avoid Cleaning Fee follow these steps**

1. Unplug machine.

2. Remove and empty the **DIRTY WATER TANK**. Rinse and let dry. **CLEAN WATER TANK**

3. Remove hair and debris from bottom of machine and brush roll.

4. Wipe down bottom.

5. Put **DIRTY WATER TANK** back onto machine and return machine to the store.

Note: Do NOT spray machine with hose or immerse in water at any time

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USING THIS MACHINE

When using an electrical appliance, basic precautions should always be followed to avoid personal injury and the risk of permanent damage to your property. Please follow all warnings below, on the Rental Contract and www.rugdoctor.com

WARNING TO REDUCE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Use the machine only as described in this manual. Use only manufacturers recommended attachments.
- For indoor use only.
- DO NOT** leave machine unattended when plugged in or while it is powered on. Unplug the machine when not in use and before cleaning or servicing.
- Use only Rug Doctor® cleaning products intended for use with this machine.
- DO NOT** immerse. Use only on surfaces moistened by the cleaning process.
- DO NOT** use machine as a vacuum.
- This machine is designed to clean normally soiled carpets in two (2) cleaning passes, except Berber multi-level or looped carpets.
- DO NOT** use more than four (4) cleaning passes on any area of carpet as overwetting and damage may result which could include permanent staining of carpet.
- Use caution when using hot tap water. Do not boil or microwave water to be used in this machine.
- DO NOT** allow the machine to run dry. When the solution tank runs out, stop using and follow directions to refill.
- DO NOT** allow this machine to be used as a toy. Close attention and adult supervision is necessary when used by or near children. This machine is not intended to be used by children age 12 and under.
- DO NOT** allow children to place their body parts in or near openings or moving parts.
- DO NOT** use with damaged cord or plug. If this machine is not working as it should, has been damaged by dropping or has been left outdoors; stop using and return to store.
- DO NOT** pull by the cord, carry by the cord, use the cord as a handle, close a door on the cord, nor pull the cord around sharp edges or corners.
- DO NOT** run machine over the cord. Keep cord away from heated surfaces.
- DO NOT** unplug by pulling on the cord. Unplug by pulling on the plug.
- DO NOT** handle the plug or use this machine with wet or sweaty hands.
- DO NOT** put any objects into opening. **DO NOT** use the machine if any opening is blocked. Keep openings free of dust, lint, hair and anything that could reduce air flow.
- Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- DO NOT** use to pick up flammable or combustible materials or liquids such as gasoline, or certain paints. **DO NOT** use in areas where they may be present.
- DO NOT** use to pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- DO NOT** place in or pick up anything with this machine that is a caustic or toxic material, such as bleach, ammonia, toilet bowl cleaners or drain cleaners.
- DO NOT** clean over floor electrical outlets.
- The use of an extension cord is not recommended. Failure to follow this instruction may expose the user to the possibility of electric shock, personal loss or injury and/or death.
- DO NOT** operate without tanks or in any manner inconsistent with the above warnings or the operating instructions with the machine.
- Always turn off this machine before connecting or disconnecting either hose, wands or motorized nozzle.
- The attachments hose contains electric wires. **DO NOT** use or repair a damaged hose. **DO NOT** use when the hose is cut or punctured. Avoid picking up sharp objects.
- The attachments hose is to be examined periodically for visible deterioration, such as abrasions, cracks, splits and the like.
- The attachments hose is to be used only for indoor household cleaning applications using only manufacturer's recommended cleaning solutions.
- Always ensure float is properly installed before any wet pick-up operation.
- Machine and attachments contain chemicals known to the state of California to cause cancer, birth defects and other reproductive harm.
- Connect to a properly grounded outlet only. See "Grounding Instructions."


For household use only

GROUNDING INSTRUCTIONS

This appliance must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord that has an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING

Improper connection of equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is for use on a nominal 120-volt circuit and has a grounded plug that looks like the plug illustrated here. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adapter should be used with this appliance.

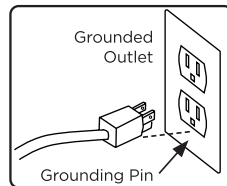

RugDoctor®

HOW TO USE THE MIGHTY PACK & WIDE TRACK




1. Press For Spray
2. Handle Release
3. On / Off Carpet / Upholstery Switch
4. Dome Filter
5. Dirty Water Tank
6. Clean Water Tank

How to Use: FILLING THE CLEAN WATER TANK

1

On the back of the machine double check the **HOSES** are securely attached.

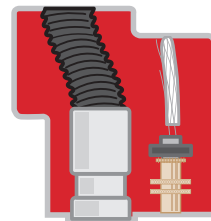

2

Access the Clean Water Tank


Pull dome wire down and remove white **DIRTY WATER BUCKET**, set bucket aside.



3

Fill the Clean Water Tank

Mix cleaning solution with hot tap water; pour mixed solution into lower red **CLEAN WATER TANK**.

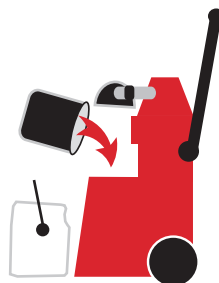

4

Now You're Ready to Clean

Replace the white **DIRTY WATER BUCKET** and secure wire over dome.




How to Use: CLEANING YOUR CARPETS

1

Plug in the Machine

Insert plug into a properly grounded outlet.

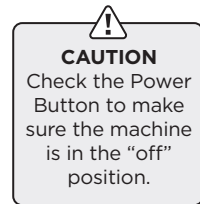

CAUTION
Check the Power Button to make sure the machine is in the "off" position.



2


Cleaning Your Carpets

Slide the switch to "Carpet". Turn on machine.

To clean, press and hold red **SPRAY** button while slowly pulling backwards

Press and release red button before ending each cleaning pass.

Tilt back to move forward, overlap cleaning passes 2-3 inches.

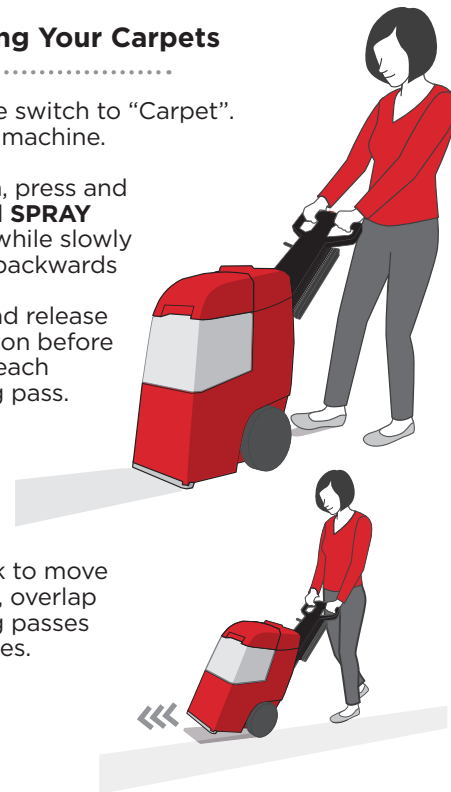

How to Use: EMPTYING DIRTY WATER TANK

1

Locate the Dirty Water Tank

The **DIRTY WATER TANK** is the tank located on the front of the machine.

When pump sound increases, **CLEAN WATER TANK** is empty. Unplug machine and remove white **DIRTY WATER TANK** to empty. Refill **CLEAN WATER TANK**.




How to Use: UPHOLSTERY TOOL

1

Attaching Tool to Machine

Large hose: Lift to disconnect the hose (A) and re-connect to the hose (B) from the Upholstery Tool.


Small hose: Push the textured metal ring (C) in while pulling the hose (D) out, insert tube from the Upholstery Tool (E)

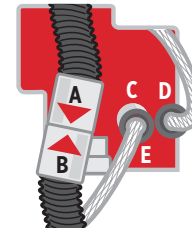

2

Fill the Clean Water Tank


Mix cleaning solution with hot tap water; pour mixed solution into lower red **CLEAN WATER TANK**.

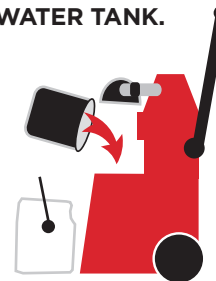

3

Slide switch to "TOOL"

1. Vacuum area thoroughly.
2. Attach tool to the machine.
3. Prepare the machine - fill tank and formula as per previous directions.

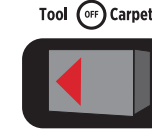

4. Turn on the machine by pressing the "ON" switch for **UPHOLSTERY/HAND TOOL** cleaning on the top of the machine.

5. Test upholstery for colorfastness by first cleaning a small, hidden area, then rubbing the test area with a white paper towel. If no color appears, continue cleaning.

6. Clean by squeezing the hand tool lever as you pull the tool backwards over area to extract dirty water.



Prepare Machine to return to store: CLEAN MACHINE

1

To avoid Cleaning Fee follow these steps

1. Unplug machine.
2. Remove and empty the **DIRTY WATER TANK**. Rinse and let dry. **CLEAN WATER TANK**
3. Remove hair and debris from bottom of machine and brush roll.
4. Wipe down bottom.
5. Put **DIRTY WATER TANK** back onto machine and return machine to the store.

Note: Do NOT spray machine with hose or immerse in water at any time

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USING THIS MACHINE

When using an electrical appliance, basic precautions should always be followed to avoid personal injury and the risk of permanent damage to your property. Please follow all warnings below, on the Rental Contract and www.rugdoctor.com

WARNING TO REDUCE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Use the machine only as described in this manual. Use only manufacturers recommended attachments.
- For indoor use only.
- DO NOT** leave machine unattended when plugged in or while it is powered on. Unplug the machine when not in use and before cleaning or servicing.
- Use only Rug Doctor® cleaning products intended for use with this machine.
- DO NOT** immerse. Use only on surfaces moistened by the cleaning process.
- DO NOT** use machine as a vacuum.
- This machine is designed to clean normally soiled carpets in two (2) cleaning passes, except Berber multi-level or looped carpets.
- DO NOT** use more than four (4) cleaning passes on any area of carpet as overwetting and damage may result which could include permanent staining of carpet.
- Use caution when using hot tap water. Do not boil or microwave water to be used in this machine.
- DO NOT** allow the machine to run dry. When the solution tank runs out, stop using and follow directions to refill.
- DO NOT** allow this machine to be used as a toy. Close attention and adult supervision is necessary when used by or near children. This machine is not intended to be used by children age 12 and under.
- DO NOT** allow children to place their body parts in or near openings or moving parts.
- DO NOT** use with damaged cord or plug. If this machine is not working as it should, has been damaged by dropping or has been left outdoors; stop using and return to store.
- DO NOT** pull by the cord, carry by the cord, use the cord as a handle, close a door on the cord, nor pull the cord around sharp edges or corners.
- DO NOT** run machine over the cord. Keep cord away from heated surfaces.
- DO NOT** unplug by pulling on the cord. Unplug by pulling on the plug.
- DO NOT** handle the plug or use this machine with wet or sweaty hands.
- DO NOT** put any objects into opening. **DO NOT** use the machine if any opening is blocked. Keep openings free of dust, lint, hair and anything that could reduce air flow.
- Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- DO NOT** use to pick up flammable or combustible materials or liquids such as gasoline, or certain paints. **DO NOT** use in areas where they may be present.
- DO NOT** use to pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- DO NOT** place in or pick up anything with this machine that is a caustic or toxic material, such as bleach, ammonia, toilet bowl cleaners or drain cleaners.
- DO NOT** clean over floor electrical outlets.
- The use of an extension cord is not recommended. Failure to follow this instruction may expose the user to the possibility of electric shock, personal loss or injury and/or death.
- DO NOT** operate without tanks or in any manner inconsistent with the above warnings or the operating instructions with the machine.
- Always turn off this machine before connecting or disconnecting either hose, wands or motorized nozzle.
- The attachments hose contains electric wires. **DO NOT** use or repair a damaged hose. **DO NOT** use when the hose is cut or punctured. Avoid picking up sharp objects.
- The attachments hose is to be examined periodically for visible deterioration, such as abrasions, cracks, splits and the like.
- The attachments hose is to be used only for indoor household cleaning applications using only manufacturer's recommended cleaning solutions.
- Always ensure float is properly installed before any wet pick-up operation.
- Machine and attachments contain chemicals known to the state of California to cause cancer, birth defects and other reproductive harm.
- Connect to a properly grounded outlet only. See "Grounding Instructions."

For household use only

GROUNDING INSTRUCTIONS

This appliance must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord that has an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING

Improper connection of equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is for use on a nominal 120-volt circuit and has a grounded plug that looks like the plug illustrated here. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adapter should be used with this appliance.

